### **Commercial Vehicle Pre-Trip Inspection Checklist**

You are only required to inspect the items on the CDL Vehicle Inspection checklist. You may use the checklist provided in this section for your test and check off items as you have completed them, but NO additional markings or writing may be placed on this list prior to the test. You MUST name, point to and/or touch and fully explain to the examiner WHAT you are inspecting each safety critical item for. If you do not, you will not get credit for the item(s).

(Remember to latch the hood.)

# Class A Checklist Tractor Semi-Trailer or Truck & Trailer or Bus & Trailer

In-Vehicle/Engine Start	PG. 3 evices PG. 4 PG. 4		
☐ tires ☐ rims			
☐ lug nuts		_	
☐ springs/mounts & air bags & sho	cks		
□ brake lines or hoses & leaks	JINO		
□ brake contaminates			
Side of Vehicle	PG. 5		
☐ lenses & reflectors			
☐ traffic monitoring devices			
□ battery			
☐ fuel tank(s)/DEF tank			
☐ frame(s)			
Combination Vehicles Only	PG. 6		
☐ air & electric lines & connectors			
$\hfill\Box$ fifth wheel skid plate or pintle hoo	ok		
or tow hitch			
☐ kingpin & apron & gap or drawba	r ring &		
tongue or coupler & tongue		_	
☐ locking & safety devices	DO 0		
Trailer Only	PG. 6		
☐ landing gear & clearance			
☐ reflective tape	DC 6		
Rear of Trailer  lenses & reflectors	<u>PG. 6</u>		
□ 1511353 & 151150(013			

<sup>\*</sup> Automatic failure if not performed correctly

**READ MN CDL MANUAL SECTION 10M PAGES 189-200** 

Department of Public Safety Driver and Vehicle Services - 445 Minnesota St., Saint Paul, MN 55101

Phone: (651) 201-7626 TTY: (651) 282-6555 Fax: (651) 296-5316

Rev. May 2024

### **Commercial Vehicle Pre-Trip Inspection Checklist**

You are only required to inspect the items on the CDL Vehicle Inspection checklist. You may use the checklist provided in this section for your test and check off items as you have completed them, but NO additional markings or writing may be placed on this list prior to the test. You MUST name, point to and/or touch and fully explain to the examiner WHAT you are inspecting each safety critical item for. If you do not, you will not get credit for the item(s).

(Remember to latch the hood.)

### Class B or Class C Checklist Straight Truck or Other Straight Vehicle

In-Vehicle/Engine Start
□ *air or *hydraulic brake check
□ parking & trailer brake check
□ service brake check
□ lighting indicators
□ emergency equipment
□ windshield & traffic monitoring devices
□ wipers & washers
□ heater & defroster
□ horn(s)
Lights Operations Check
□ all external lights
Front of Vehicle/Engine Area
□ lenses
□ fluid levels
□ fluid & air leaks
□ steering systems
Steering Axle
□ tires
□ rims
□ lug nuts
□ springs/mounts & air bags & shocks
□ brake lines or hoses & leaks
□ brake contaminates
Side of Vehicle
☐ lenses & reflectors
□ traffic monitoring devices
□ battery □ fivel tenk(o)/DEF tenk
☐ fuel tank(s)/DEF tank
☐ frame(s)  Rear of Vehicle
□ lenses & reflectors
* Automatic failure if not performed correctly

**READ MN CDL MANUAL SECTION 10M PAGES 189-200** 

Department of Public Safety Driver and Vehicle Services - 445 Minnesota St., Saint Paul, MN 55101

Phone: (651) 201-7626 TTY: (651) 282-6555 Fax: (651) 296-5316

Rev. May 2024

#### **INSIDE VEHICLE/Engine Start:**

Safe Start: <u>SHOW:</u> Before starting the truck, buckle-up. Pull on the parking + trailer brakevalves and/or point to them and state they are engaged. Next, <u>SHOW:</u> the transmission is in neutral and start the truck.

<u>ii. THINK G A L E:</u> If air gauges read above 100 psi, (if need be) pump the brake to release air to 90-100 psi and "reset the governor."

#### **AIR BRAKE CHECK:**

# 1. Governor Cutoff Check & Air Gauge

**G.** Leave both the parking + trailer brakes pulled out, and inspect that the air gauge is working and builds the air pressure. Mention governor cutoff of approximately 120-140 psi, and **CALL OUT** the cutoff pressure of your vehicle. **EXPLAIN:** "Air gauges show air pressure and identify the gauge."

#### 2. Air Loss check

A. Apply pressure on the service brake pedal. Then release the parking and trailer brake. Let the needles stabilize at a minimum of 90 psi. Shut the truck off and turn the key to the **ON** position.

i. Note: Parking and trailer brake valves should be pushed in or "released."

EXPLAIN: "I should not lose more than 4 psi per minute." (Note: 3 psi for Class B).

ii. Wait the full minute while holding your foot on the service brake **EXPLAIN:** "I did not lose more than 4 psi (Class A) or 3 psi (Class B)."

## 3. Low Air Alarm check:

**L. EXPLAIN:** "The low air alarm should come on before 55 psi. I should be able to hear it and see it." Start to pump the service brake until the alarms come on. **CALL OUT** the psi of your vehicle and confirm again that you "see it and hear it."

### 4. Emergency Brake check:

E. EXPLAIN: "Both brake valves should pop out and apply automatically between 45-20 psi." Start to pump the brakes until both valves apply, "pop out" and CALL OUT the psi of your vehicle

Start the engine, put the truck in drive and try to pull against the brakes. **EXPLAIN:**"Emergency brakes hold." Put the truck in neutral and build air pressure to 90-120 psi which is the safe operating range.

#### **Parking & Trailer Brake Check**

Step 1. Parking Brake: Release (push in) the trailer brake (red valve) leaving the parking brake (yellow valve)

is applied or pulled out. Put the truck in drive/gear. Gently pull against the parking brake,

truck should not move; **EXPLAIN:** "Parking brake holds."

Step 2. Trailer Brake & connection

Release (push in) parking brake (yellow valve) and pull out the trailer brake (red valve). Gently apply the gas pedal or release the clutch to gently pull against the trailer. Then, EXPLAIN: "Trailer Brake holds the truck and the trailer is securely coupled."

Service brake: SHOW: Release (push in) the parking and trailer brake valves, put the truck in drive, roll

forward, and stop with the service brake/brake pedal. **EXPLAIN**: "The service brake stops

the truck; also the brakes apply evenly without pulling to either side."

Lighting indicators: EXPLAIN: "ABS & DEF indicator lights are not (on), and there is no check engine warning

light visible. SHOW: Turn on lights and check right / left turn signal indicators, and four-way

flashers (hazards). Check the high beam indicator.

**EXPLAIN:** "dash lights work, I can read the gauges clearly."

Emergency Equip: Show: Spare fuses, none are missing. 3 red reflective triangles that are not cracked or

missing and securely mounted; the fire extinguisher is fully charged, and securely mounted.

Windshield & Traffic Monitoring Devices (mirrors): EXPLAIN: "Windshield is clean, clear, and not cracked. No illegal stickers and nothing blocking my view. The mirrors are clean, clear, and adjusted properly to me."

Wipers & washers: SHOW: Test the washer fluid first. EXPLAIN: "the washer fluid applies evenly, and the wiper blades work properly with no signs of streaks."

Heater & defroster: SHOW: Turn fan to high, turn selector to defroster/floor, and turn temperature to heat. SHOW: with your hand that the top and bottom fans both work. EXPLAIN: "Both fans and heat work properly."

Horn: SHOW: Toot the horn(s), EXPLAIN: "city horn works and air/freeway horn works" (if equipped). Note: One operating horn is required for testing.

Lights Operation Check: TIP: leave lights on and truck idling. EXPLAIN: "Now I will check all my lights." SHOW: Now exit the vehicle facing the truck, maintaining three points of contact, (close the door).

#### **All External Lights:**

EXPLAIN/SHOW: "Lights are on and working by pointing to each light)."

- 1. Low Beams and High Beams: check front. SHOW: difference between (low vs high beams).
- 2. Running Lights (Clearance, marker & tail): check all sides of truck and trailer + top of cab.
- 3. Right Turn Signal: check front & back.
- 4. Left Turn Signal: check front & back.
- 5. Hazard/Four Way Flashers: check front & back.
- 6. \*Brake Lights: Ask the examiner to help you check the brake lights.

Front of Vehicle/Engine Area

ABC = abrasions, bulges, cracks (hoses) CCC = clean, clear and not cracked CDL = cracks, dents, or leaks

Lenses: EXPLAIN: "Inspect that light lenses or covers are proper color (amber), clean, not cracked or missing and securely mounted."

#### Fluid Levels

- 1. Oil Level: EXPLAIN: "I would remove the yellow dipstick, while the engine is off. Level should be above the add mark, if below, point to where it should be added."
- 2. Coolant Level: EXPLAIN: "I would check while the engine is off, should be above the add mark. If below, point to where it should be added."
- 3. Power Steering Fluid: EXPLAIN: "I would check while the engine is running. Should be above the minimum/add mark. If below, point to where it should be added."
- 4. AutomaticTransmission Fluid: Automatic transmissions only, EXPLAIN: "I would check the yellow dipstick (passenger side) - should be above add mark (while engine is running). If low, add fluid to the dip-tube where it was checked."

Fluid & Air Leaks: EXPLAIN: "Check under the vehicle for any puddles on the ground, also noticing any air leaking, and smells of burning fluid or rubber. Check all hoses to be properly clamped, and free of any abrasions, bulges, cracks or leaks. Check that all caps are not missing and securely mounted."

#### Steering Axle:

ABC = abrasions, bulges, cracks (hoses) CDL = cracks, dents, or leaks

CBD = cracks, bent, or dents

#### Steering Systems:

Steering Box: EXPLAIN: "Properly mounted and secure, no missing nuts/bolts, not cracked or leaking. Hoses are clamped securely, not leaking and showing no abrasions, bulges or cracks."

#### Steering Linkage (3 parts):

- 1. EXPLAIN: "Check for linkage cracked, bent or dented."
- 2. EXPLAIN: "All joints are connected securely, properly greased, and showing no loose or excessive play."
- 3. EXPLAIN: "Check for any loose or missing nuts/bolts, and no missing cotter pins in the castle nuts."

#### Tires: (3 steps)

#### **EXPLAIN:**

- 1. TREAD: "Tire is evenly worn, at least 4/32 and virgin tread (not recapped)."
- 2. CONDITION: "The tire is properly mounted, free of any abrasions, bulges, cracks or leaking air."
- 3. INFLATION: "The tire is properly inflated to the tire specification, and checked through the valve stem with an air pressure gauge. The cap is not missing and securely mounted."

Rims: EXPLAIN: "Inspect the rim to have no signs of being cracked, bent, and/or illegally welded with no signs of rust trails. Inspect the rims do not have elongated (out of round) holes behind the lug nuts."

<u>Lugs & Lug Nuts:</u> "The lug nuts are present, not cracked or bent. No gaps between lug nuts and rim, with no shiny threads, securely mounted."

Springs/Mounts/Airbag & Shocks: CBD = cracks, bent, or dents CDL = cracks, dents, or leaks

**Springs:** EXPLAIN: "The metal is not cracked, bent, rusted through, sagging or loose. Springs are not shifting or scissoring, and securely mounted."

Mounts: EXPLAIN: "Inspect the Spring mounts + U-Bolts metal to not be bent, twisted or sagging with no gaps or missing bolts. No torn or missing bushings and are securely mounted."

**Shocks: EXPLAIN:** "Shocks are not cracked, bent, rusted through, straight or loose with no signs of leaks. Bushings are not torn or missing with no missing nuts and bolts, securely mounted."

Brake hoses/Lines/Leaks: EXPLAIN: "Hoses are free of any abrasions, bulges, cuts and have no signs of leaks or missing hose clamps. The ABS line shows no corroded, exposed or loose wires. Couplings/fittings are secure."

ABC = abrasions, bulges, cracks (hoses) CEL = corroded, exposed or loose wires

Brake contaminates: EXPLAIN: "Inspect the drum and lining for grease, oil, mud and/or rocks that can affect proper braking. Automatic Transmission ONLY - EXPLAIN: "must look through inspection holes."

#### (Remember to latch the hood.)

#### SIDE OF VEHICLE/TRAILER: CCC = clean, clear and not cracked CBD = cracks, bent, or dents

CCC = clean, clear and not cracked CBD : CDL = cracks, dents, or leaks CEL=

CBD = cracks, bent, or dents
CEL= corroded, exposed or loose wires

<u>Lenses & Reflectors</u> <u>EXPLAIN:</u> "Inspect that light lenses or covers are the proper color, clean, not cracked or missing, securely mounted."

<u>Traffic Monitoring Devices:</u> (Mirrors) <u>EXPLAIN:</u> "Metal frame is not cracked or bent. Mirrors are clean, clear, and not cracked, loose or missing, with no missing nuts or bolts. Securely mounted."

Battery: EXPLAIN: "Battery is not loose, corroded, cracked or leaking. The wires are not cut, exposed or loose.

The 1. batteries, 2. battery box, and 3. battery box cover are securely mounted within the box and on the truck."

<u>Fuel tank(s)/DEF tanks: EXPLAIN:</u> "Fuel tank is secured with at least two metal straps and show no signs of the straps being twisted, loose or rusted through. The rubber bushings are not missing, and metal is not rubbing on metal. The fuel cap seal is in place, not worn through, missing or leaking. Search for leaks at the top and below the fuel tank, as well as at the cap. Inspect the tank is securely mounted."

Frame(s): EXPLAIN: "Frame must be free of any cracks, breaks, broken welds, holes or other damage to the frame and cross-members. Inspect for cracks, breaks or holes in the cargo area or floor, including the trailer."

#### Combination Vehicles (ONLY) CEL= corroded, exposed or loose wires CDL = cracks, dents, or leaks

(TRACTOR) Air and Electric Connectors/Lines: EXPLAIN: "Electrical cord is plugged in and secured w/spring loaded safety latch. Inspect that the lines are not cut, exposed or loose. Ensure air lines are connected at glad hands, and the rubber seal is not torn/leaking. Inspect the lines have enough slack for turns, but not too much slack where the lines are dragging."
(SEMI TRAILER) Air and Electric Connectors/Lines: EXPLAIN: "Electric cord is firmly plugged in and secured. The wires are not cut, corroded, exposed or loose and not dragging below the trailer frame. Securely mounted."

#### Fifth Wheel Skid Plate CBD = cracks, bent, or dents

- 1. <u>Fifth Wheel: EXPLAIN:</u> "5th wheel skid plate is either greased or with a poly plate, 5th wheel skid plate is mounted securely to the platform, not bent or cracked and securely mounted."
- 2. <u>Platform: EXPLAIN:</u> "Platform is securely mounted to the frame, not cracked, bent, or rusted through. Inspect nuts and bolts are not missing and securely mounted to the platform."

#### King Pin & Apron & Gap CBD = cracks, bent, or dents

- 1. <u>Kingpin: EXPLAIN:</u> "Locked in locking jaws, not cracked or bent. Head is visible under the locking jaws."
- 2. Apron: EXPLAIN: "Not cracked or bent, and secured to the trailer frame. No missing or broken welds."
- 3. <u>Gap: EXPLAIN:</u> "Look for gaps between the apron and 5th wheel and confirm there should not be any gaps. Explain if there was a gap, it would indicate the kingpin is not properly coupled."

#### **Combination Vehicle Only: (Continued)**

#### **LOCKING & SAFETY DEVICES:**

- 1. <u>Locking Jaws: EXPLAIN:</u> "Locking jaw is around the "shank" and not the "head" of the kingpin, latched securely and visible. Inspect that it is properly greased, not bent or cracked, and securely mounted."
- 2. <u>Release Arm: EXPLAIN:</u> "Properly seated in the drive position and is not bent. Inspect for cracks and that it has the proper spring tension."

### TRAILER ONLY: CDL = cracks, dents, or leaks CCC = clean, clear and not cracked

Landing Gear & Clearance: EXPLAIN: "Fully raised up off the ground between the truck and trailer, no missing parts/nuts/bolts. The landing gear is positioned properly so it will clear the rear of the truck (fifth wheel) during turns. No missing welds, and brackets are not cracked, bent or rusted through. No loose or missing bolts, landing foot and handle is stowed in drive position. Securely mounted and strong enough to support cargo."

**Reflective Tape: EXPLAIN:** "Reflective tape is DOT approved, and reflective tape on the sides and rear of the trailer are present and securely mounted to the vehicle."

#### **Rear of Trailer:** CCC = clean, clear and not cracked

Lenses & Reflectors: EXPLAIN: "Lense covers on the sides of the vehicle and trailer (combination only) are the proper color (front=amber, rear=red), clean and not missing. Reflectors on the sides of the truck and trailer are the proper color (front=amber, rear=red), clean, and not missing."


#### **HELPFUL ACRONYMS:**


CBD = No Cracks, Bends, Dented ABC = No Abrasions, Bulges, Cracks/Cuts


CDL = No Cracks/Cuts, Dents, Leaks/Loose PMS = Properly Mounted, Secure


CEL = No Corroded, Exposed or Loose wires CCC = Clean, Clear, not Cracked

### **BASIC CONTROL SKILLS (Test 2)**

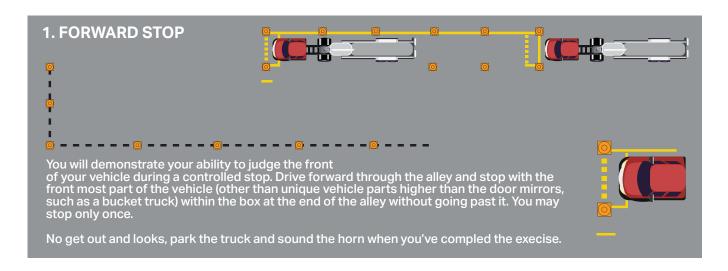

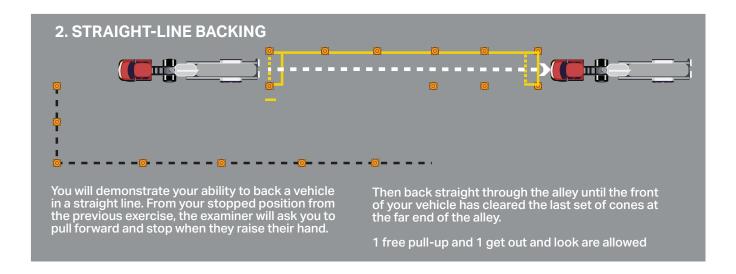

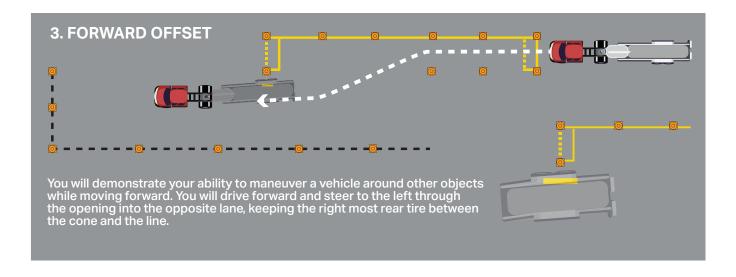

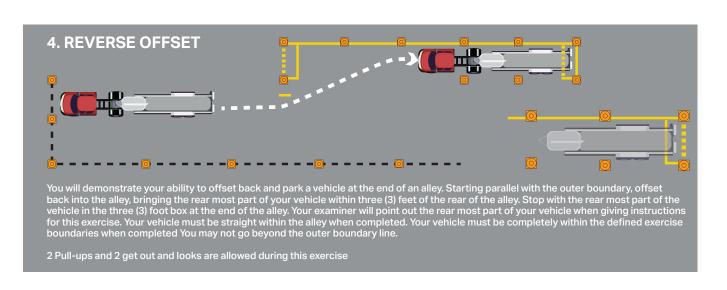

#### MENTALLY PREPARE FOR YOUR ROAD TEST

<u>Proper Turns:</u> During turns, remember to stay straight and turn late. <u>Remember these steps:</u> 1. The closer you are to the right-hand curb the further straight you have to travel forward to avoid hitting the curb. 2. be aware of the left and right-hand sides of your vehicle/s while making turns. 3. Allowing too much space between you and the curb will also create space for drivers to attempt to pass. 4. Close this gap while completing turns.

Right turns: The truck and trailer tires should be 4-5 feet from the curb, when you start the turn. Always return to the curb about 4-5 feet to complete the turn. It's okay to enter into the opposing lane of traffic as long as it's safe to do so. It's also okay to cross over the center of road. Watch your rear wheel / rear trailer wheels in the passenger side mirror, wait for the rear wheel of the trailer or axle wheel (class B) to enter into the "round portion," of the curb and then come back to the curb on your right. DO NOT hit a curb with the drive tires (if Class B) and trailer tires (if Class A) on any right turn.

<u>Left turns:</u> The truck and trailer must remain in the left most lane, tires must go around the center line and/or painted yellow center lines. Always finish the turn in the same lane you started from. DO NOT let the trailer or class B vehicle rears tires cut or cross the yellow the center line/s on a left turn.

<u>Double turns:</u> As a CDL driver you need to turn from the outside lane whenever 2 turn lanes are available. Thus, leaving the inside lane for other traffic. Remember to always return to the same lane you started from i.e. the outside lane.

<u>Proper Stops:</u> Come to a complete stop, behind the stop sign 2-3 feet, cross-walks and stop bars. You should be able to see the bottom edge of the road marking. Remember to stop, look in both directions and then move when it is safe to do so. You do not want to stop or slow other drivers down while you proceed through the intersection and/or to complete any turns.

<u>Proper Observation:</u> Be alert and aware of all sides of your commercial vehicle and trailer. Keep your head moving during the road test, you can never look too-much. Every 12 seconds, show the examiner that you're looking near, far and side to side.

<u>Proper Hill Park:</u> Always signal to the curb. The truck and trailer," if equipped with a trailer," must be parallel to the curb and also 1 foot or less from the curb. Try not to rub the curb with either the truck or trailer tires. When parking uphill, move the tires to the Left or away from the curb. Whenever parking down hill, move the tires right or into the curb.

Proper Highway Driving: Remember to signal early, often and continuously when entering the highway/ freeway. Proper lane changes require you signal early, look, and then move into the lane when it is safe to do so. CDL drivers should allow a cushion of space around their vehicle/s. Always have an out or escape plan. Do not follow too close and provide a minimum of 150 feet in the front of the truck. Observe all speed limits, do not speed.

#### **REMINDERS & HELPFUL TIPS**

 You're not actually checking fluid levels, landing gear pins, glad-hands, gas cap & seals, removing oil and automatic transmission fluid dip sticks, coupling and uncoupling of trailer, crawling under the trailer, pulling release arm so as to unlock the locking jaw of the trailer. But rather mention this is what <u>"I WOULD DO."</u> 2. <u>Make sure you point at the part</u> and give a detailed description/explanation about every item listed! <u>Mention 3-4 things</u> about it, Check it off and move on. BE detailed, try to give a <u>3 - 4 point description</u> about nearly every item listed.

**Examples**"

- "not cracked, bent, dented or loose"
- "no missing bolts; mounted securely"
- "not bent, twisted, or warped; not rusted through"
- "not leaking" etc.

Follow the list, and Be mindful of what you are saying.

#### **REMEMBER YOU ARE NOT TIMED!**

- 3. <u>Study your Pre-Trip.</u> You need to practice, rehearse and study the Pre-Trip on your own to establish knowledge, confidence and passable results.
- 4. <u>Arrive</u> at the Driver's Exam Station at least <u>30 minutes</u>, before your scheduled road test. Please dress and be prepared for the inclement weather, cold, rain, snow and ice.

<u>Check in</u> at the Outside Dispatch Window. <u>DO NOT check in at the front door</u>.

Instead walk around the DMV building to the dispatch window. <u>Wait in or by your CDL Test Truck</u>.

### IF YOU DO NOT SEE YOUR TRUCK, CALL 612-723-4398 ASAP!



# Class A Leasing Office

8899 Hastings St. NE Blaine, MN 55

### Arden Hills Exam Station

5400 Old Highway 8 Arden Hills, MN 55112

#### Plymouth Exam Station

2455 Fernbrook Lane N Plymouth, MN 55442

#### Eagan Exam Station

2070 Cliff Rd, Eagan, MN 55122

Contacts: Main Line (612)723-4398 Eric / Owner (612)618-1812 | Sabrina (763)344-3113 Alex (651) 802-4452

**CDL** Appointments for

Arden Hills, Plymouth & Eagan DMV: 651-297-5029